

# FME-Connectors

FME-Connectors and extension for interconnection of FME-cables

ORDERING CODE NO.	DESCRIPTION
<b>FME-RG 58</b>	Basis FME-connector for crimping on RG 58
<b>FME-RG 174</b>	Basis FME-connector for crimping on RG 174
<b>MFME-RG 58</b>	Male FME-connector for crimping on RG 58
<b>MFME-RG 174</b>	Male FME-connector for crimping on RG 174
<b>FME-P</b>	Extension (male to male) connector for interconnection of FME-cables
<b>FME-FME</b>	FME extension connector, female to female
<b>FME-BNC</b>	FME → BNC (male) connector
<b>FME-TNC</b>	FME → TNC (male) connector
<b>FME-N</b>	FME → N (male) connector
<b>FME-UHF</b>	FME → UHF (male) connector
<b>FME-MUHF</b>	FME → Mini-UHF (male) connector
<b>FME-SMA</b>	FME → SMA (male) connector
<b>FME-FSMA</b>	FME → SMA (female) connector
<b>BFME-ICOM</b>	Black FME → ICOM connector for interconnection of FME-cables
<b>FME-EBNC</b>	FME → elbow-BNC (male) connector
<b>FME-ETNC</b>	FME → elbow-TNC (male) connector
<b>FME-EMUHF</b>	FME → elbow-MUHF (male) connector



PROCOM A/S reserve the right to amend specifications without prior notice.

13/12/11